


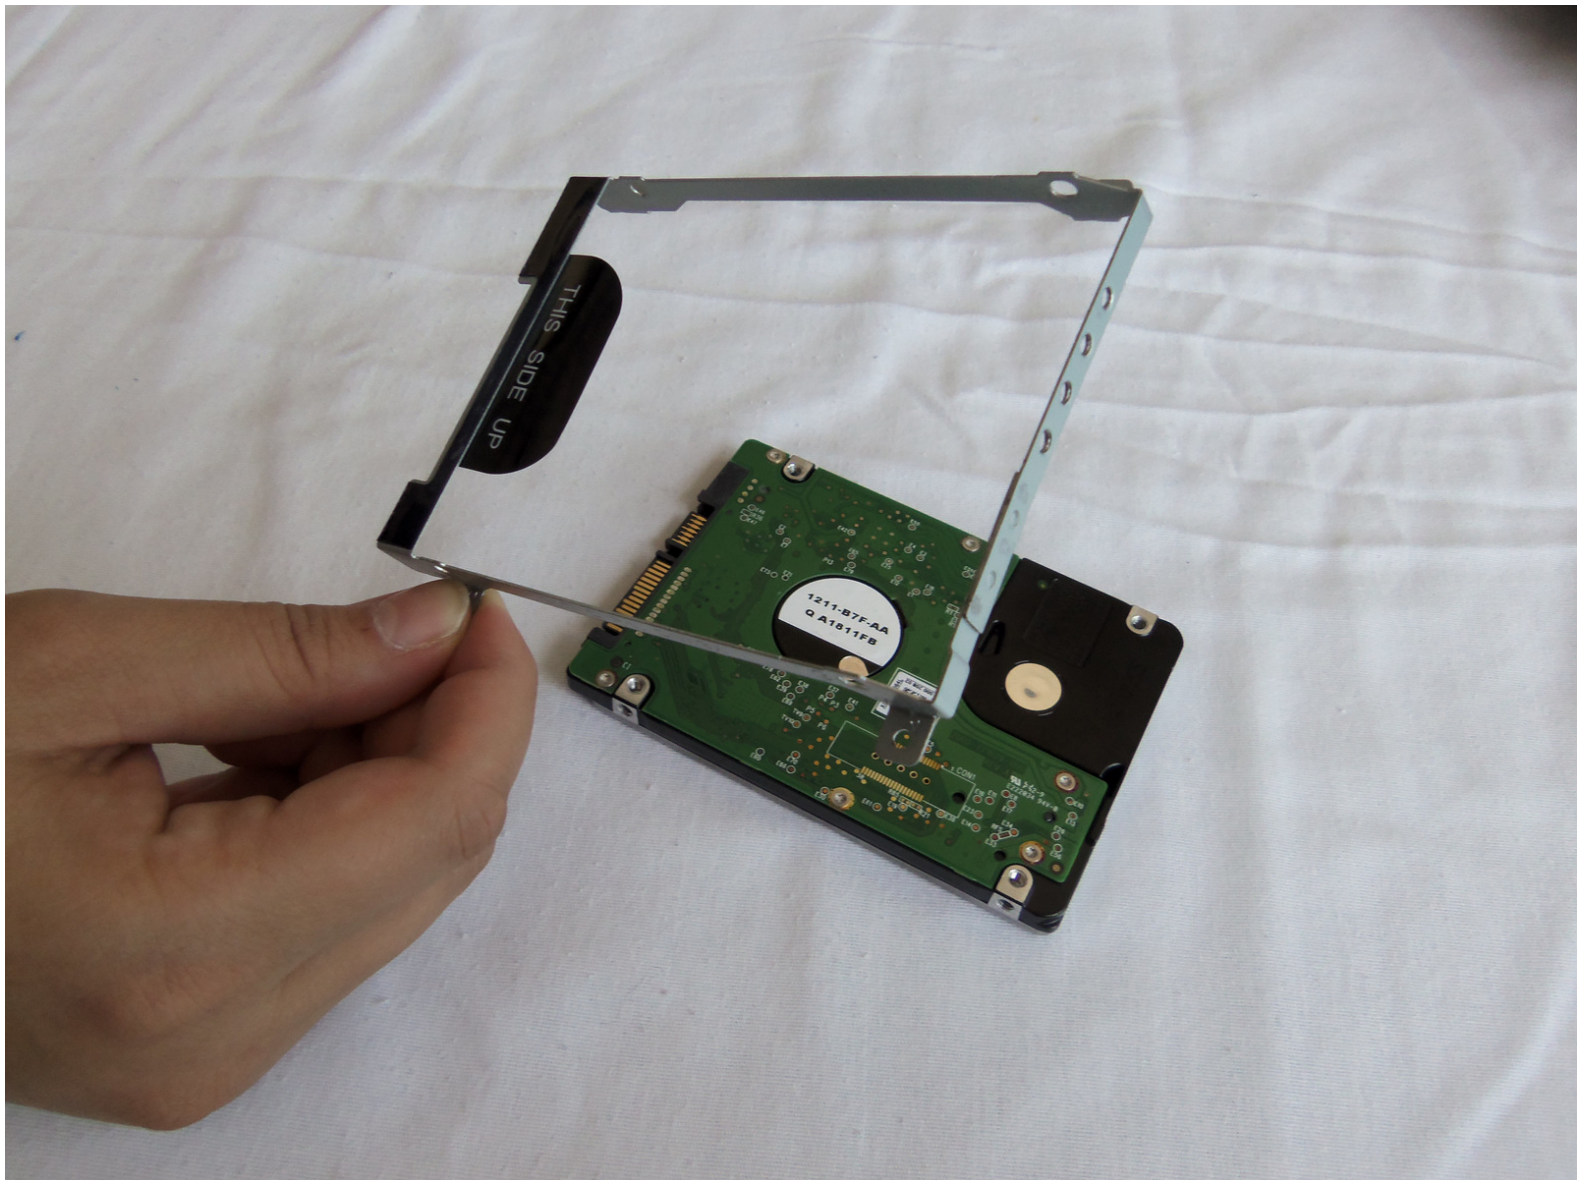

Dell XPS 17 L702X Hard Drive Replacement

Replacing Both Hard Drives of XPS 17 L702X

Written By: Shin Sul





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip over the laptop with the bottom battery compartment facing up.

Step 2



- Slide the tab below the battery leftwards and hold.

Step 3




- While holding the tab, lift the battery out of its compartment.
- Release the tab after removing the battery.

Step 4 — Hard Drive




- Loosen the module cover screw with a Phillips screwdriver.
- ⚠ The screw is attached to the cover, do not force it out.

Step 5

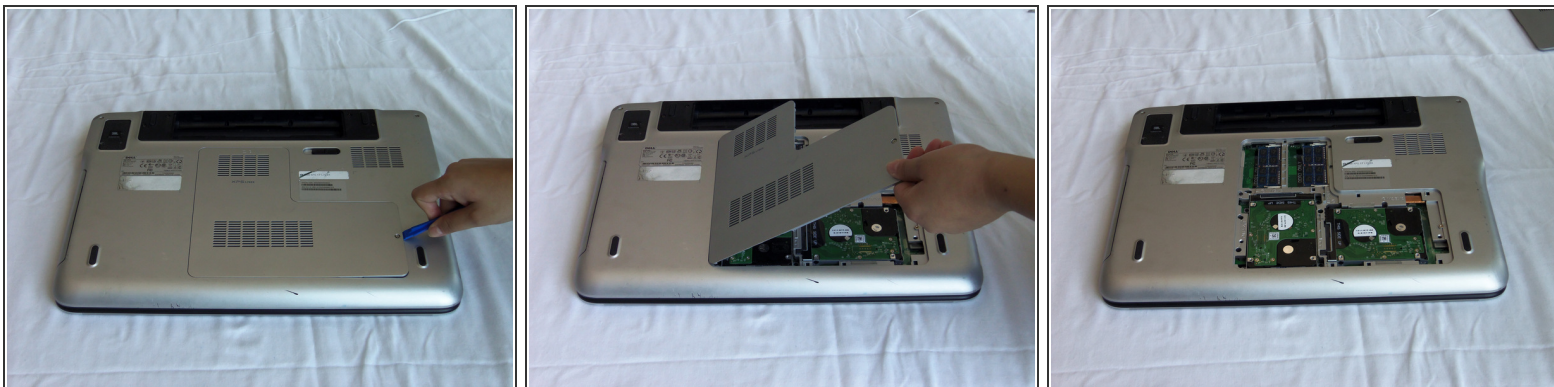


- Lift the module cover by inserting a plastic opening tool into the crevice near the screw and lift upwards.

Step 6

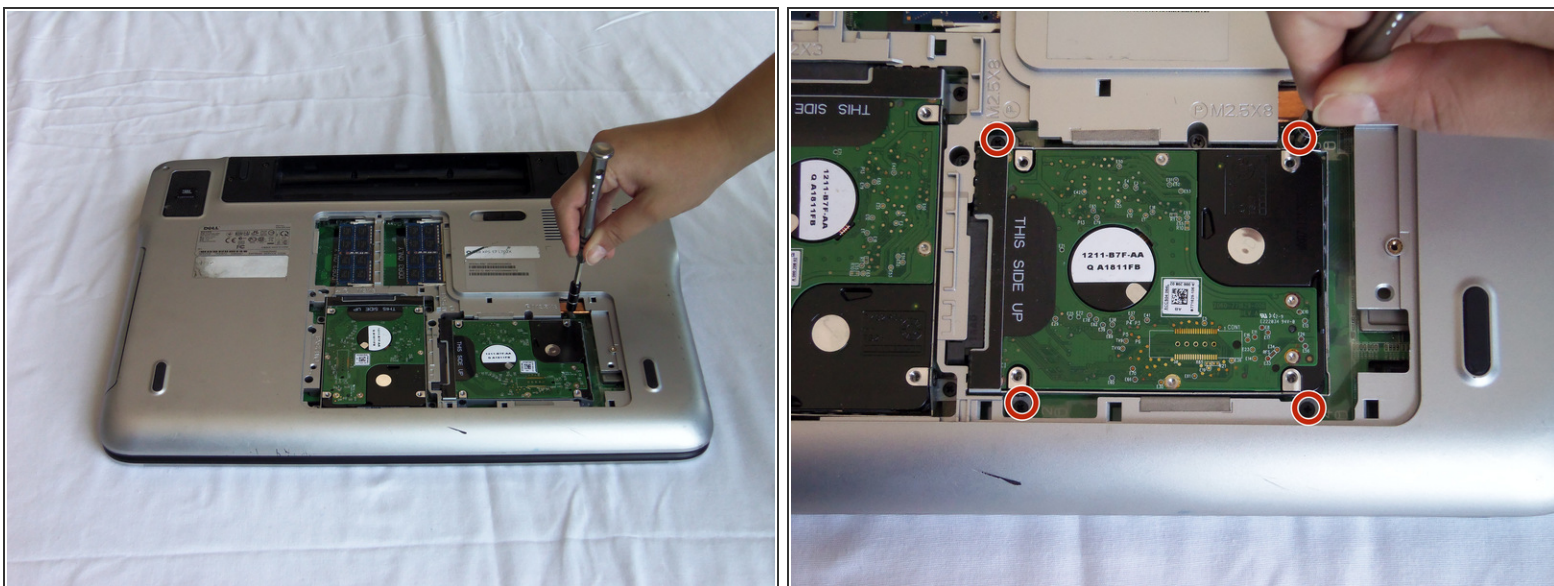


- Use a Phillips screwdriver and unscrew four 4mm Phillips screws fastening the first hard drive.

Step 7

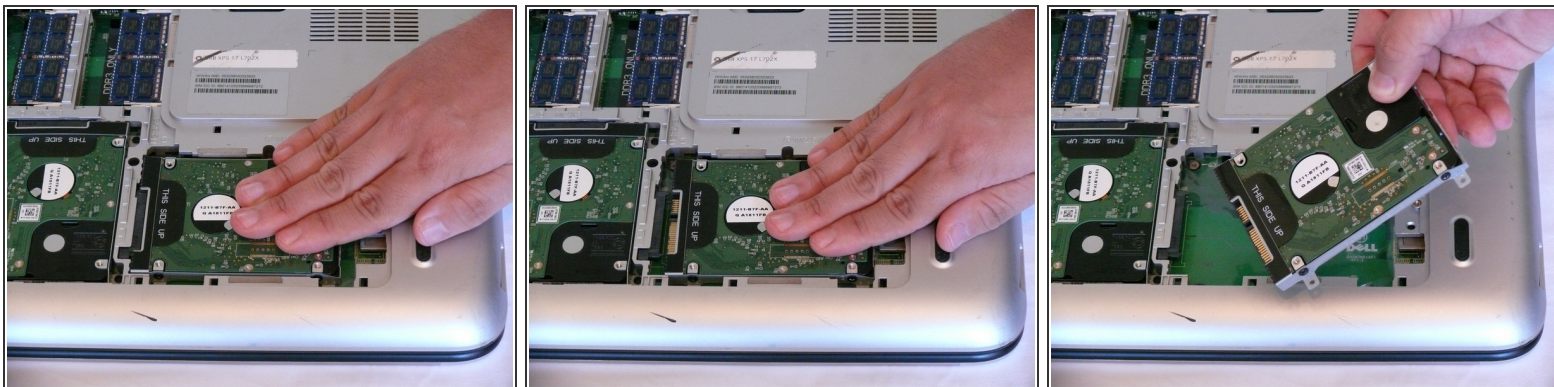


- Slide the hard drive towards the hole where the back panel assembly screw was located with your hands to disconnect and lift to remove it.

Step 8

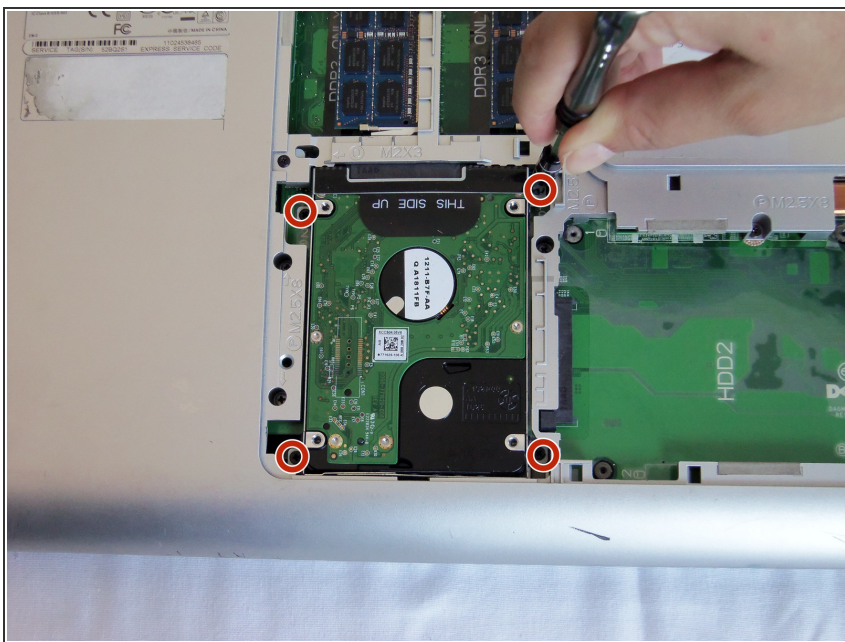


- Use a Phillips screwdriver to unscrew four 4mm Phillips screws on the second hard drive.

Step 9

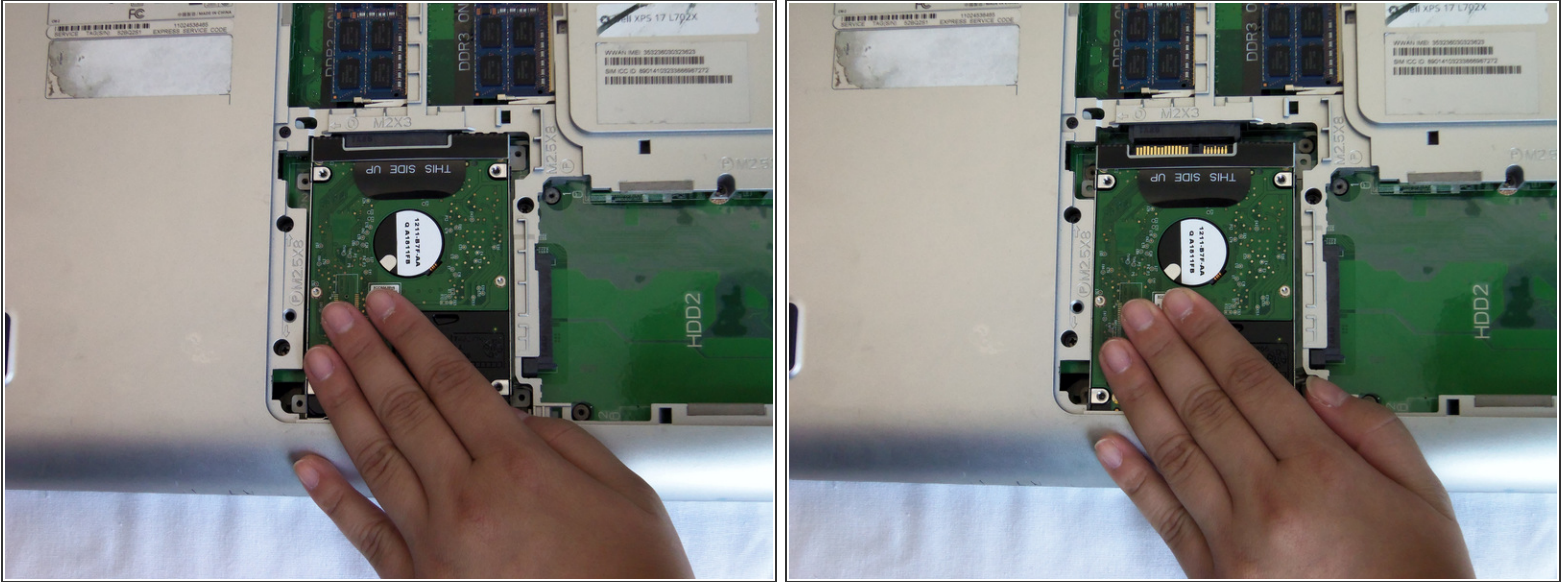


- Slide the hard drive towards the edge nearest you to disconnect it.

Step 10

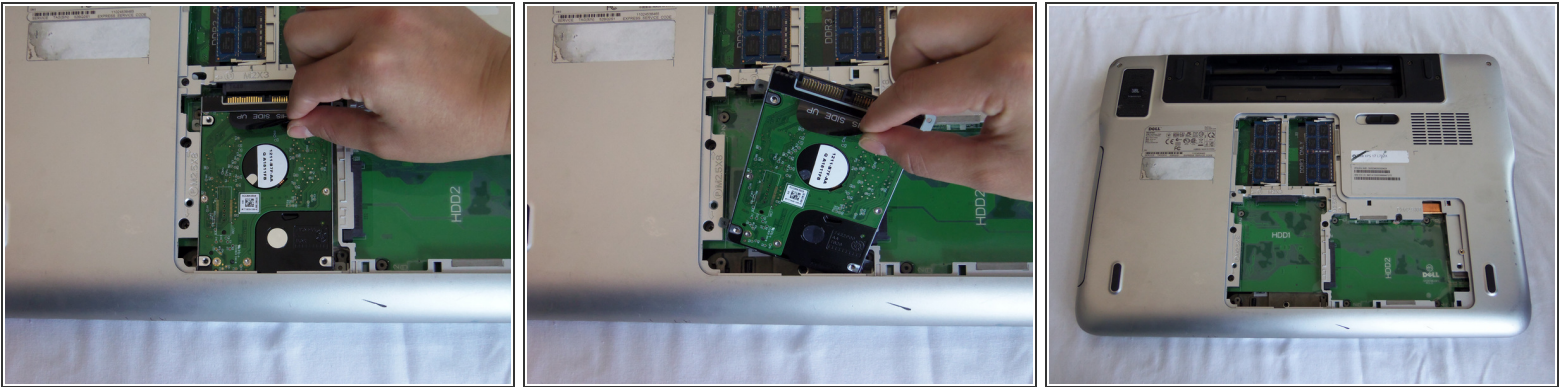

- Using the tab that says "this side up" pull away from the laptop to remove the hard drive.


Step 11

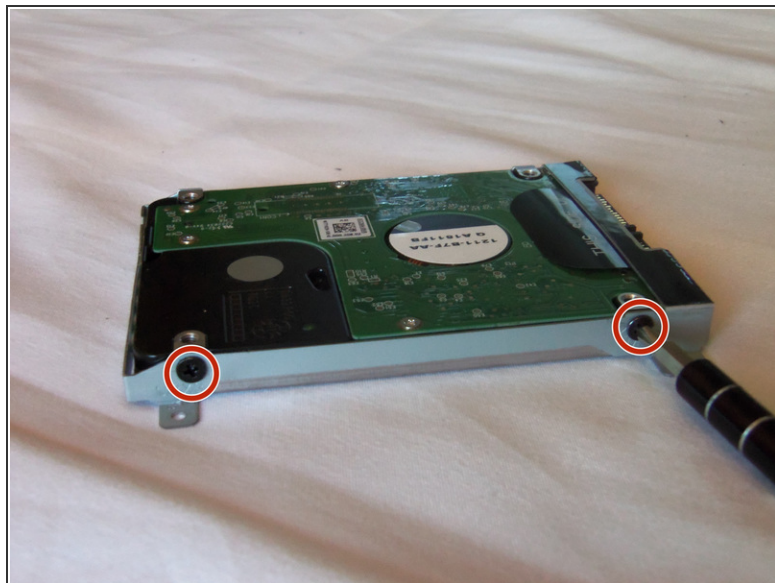

i Repeat this step for each hard drive.

- Unscrew two 4mm screws from each side of the hard drive casing with a Phillips screwdriver.

Step 12

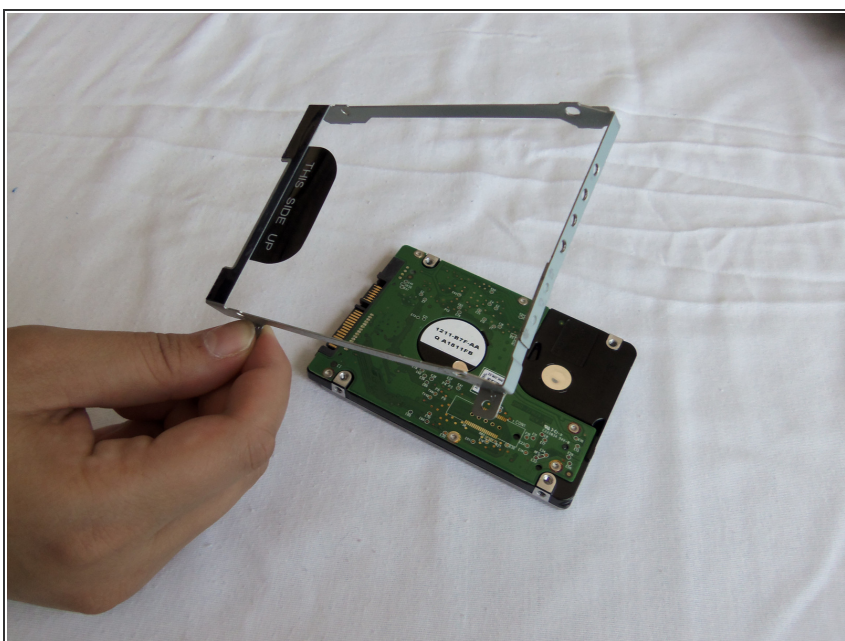

- Remove the hard drive casing.

To reassemble your device, follow these instructions in reverse order.

